



MINI SPRAY NOZZLES

REPAIR INSTRUCTIONS

The entire working parts of the Strahman Mini M-70 Light-weight Spray Nozzle are contained in a Single Cartridge Unit. **CAUTION: Not for use on steam hose.**

To replace cartridge:

1. Remove the **Rubber Cover (20)** by slipping it off the back of the nozzle and pulling it over the front using a round tool; not a sharp tool that can cut cover.
2. Remove the **Lever Arm Screw & Nut (24)** and the **Lever Arm (6)**.
3. **Unscrew Lock Screw (30)** and extract the cartridge from back end of nozzle with **Cage (18)**.
4. Be sure when replacing **Cage (18)** to place cut-away part of cage facing downward, so **Lever Arm (6)** can be inserted.
5. To insert new cartridge, reverse procedure beginning.
6. Be sure **Lever Arm (6)** is placed ahead of **Stem Guide (31)** on cartridge unit.
7. To replace **Rubber Cover (20)** wipe body with detergent, insert nozzle end first then handle into cover. Use a round ended tool approx. 3/8" in diameter to stretch cover over back. Do not use sharp tool. Sharp tools can cut cover.



